


**SYSTEM LOCATION**

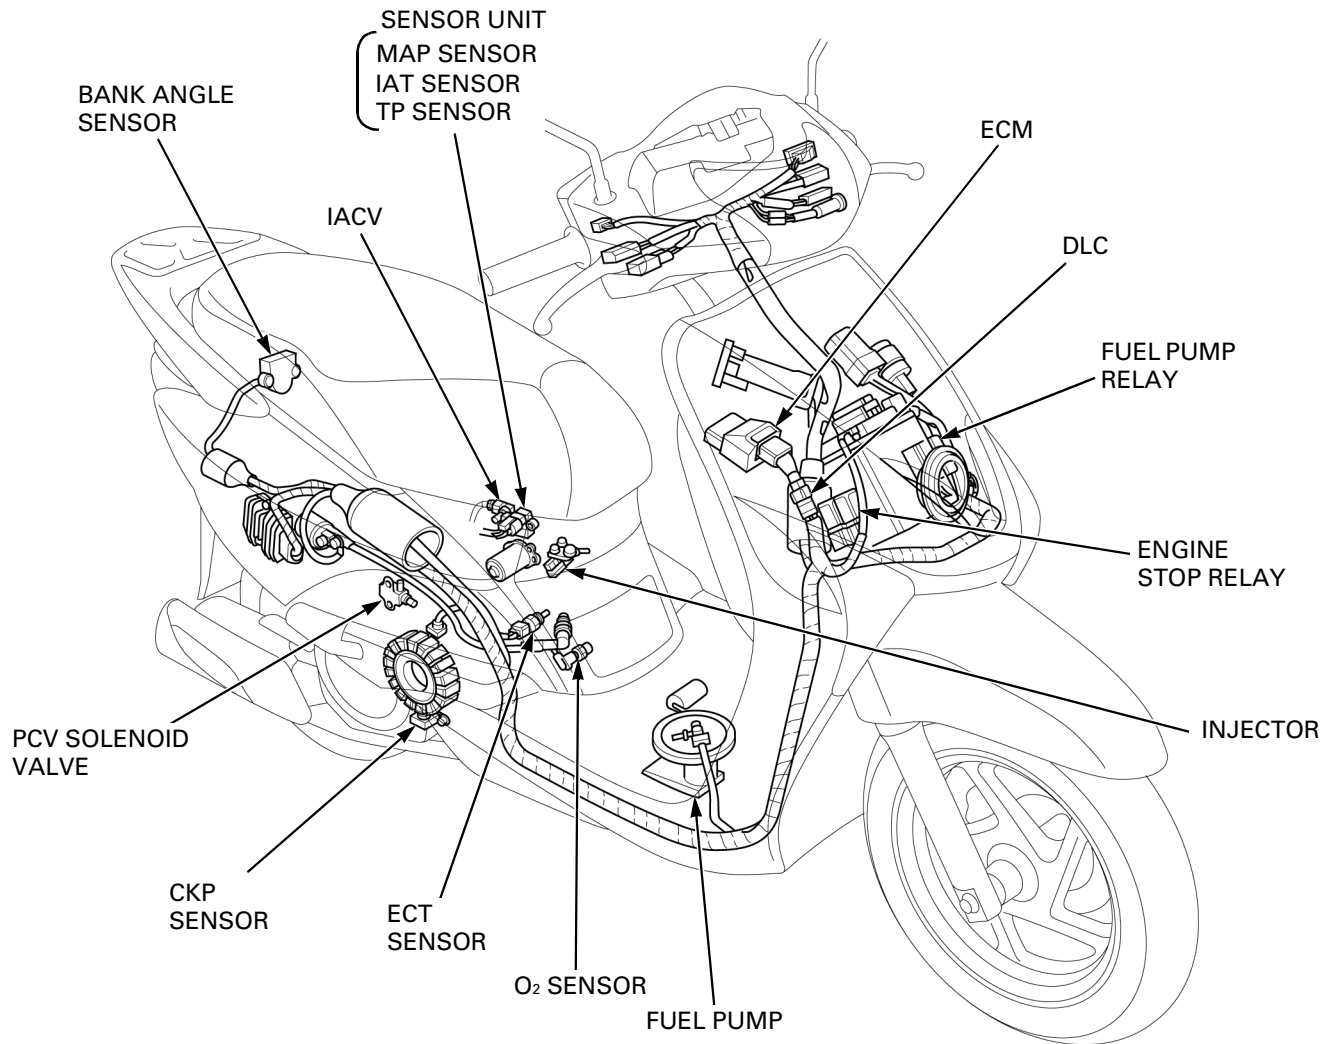

**ABBREVIATION**

Throughout this manual, the following abbreviations are used to identify the respective parts or systems.

Abbrev. term	Full term	Abbrev. term	Full term
PGM-FI	Programmed Fuel Injection	IACV	Idle Air Control Valve
MAP sensor	Manifold Absolute Pressure sensor	ECM	Engine Control Module
TP sensor	Throttle Position sensor	DLC	Data Link Connector
ECT sensor	Engine Coolant Temperature sensor	MIL	Malfunction Indicator Lamp
IAT sensor	Intake Air Temperature sensor	PCV	Positive Crankcase Ventilation
CKP sensor	Crankshaft Position sensor		