


## FUEL SYSTEM (Programmed Fuel Injection)

1	2	3	4	5	6	7	8	9		11
IGP	LG	O <sub>2</sub>	SG	THL	VCC	FLR	ST-MAG	PG		IGPLS
12		14	15	16		18		20	21	
PCP		TA	SCS	INJ		WARN		IACV2A	IACV1A	
23	24			27		29	30	31	32	33
PCM	TW			PB		STSW	K-LINE	IACV2B	IACV1B	PCV

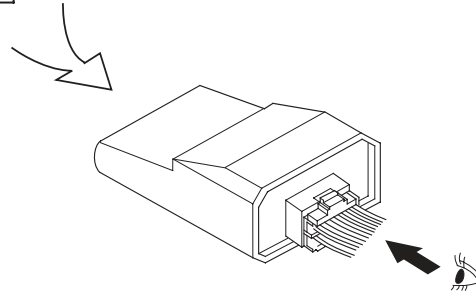

	COLOR	NAME	FUNCTION	DESCRIPTION	SIGNAL
8	Y/G	ST-MAG	ST-MAG	starter relay coil drive signal	
9	G/P	PG	POWER GND	ECM power circuit ground line	-
11	Y/Bu	IGPLS	DRIVER IGNITION PULSE	ignition primary coil pulse signal	
12	Y	PCP	INPUT-CKP SENSOR (+)	CKP sensor input signal (+)	
14	W/Bu	TA	INPUT-IAT SENSOR	IAT sensor input signal	
15	Br	SCS	INPUT-SERVICE CHECK SIGNAL	failure code drive signal	