



FUEL SYSTEM (Programmed Fuel Injection)

2. Make sure the connection is secure and that the pawls are firmly locked into place; check visually and by pulling the connector.

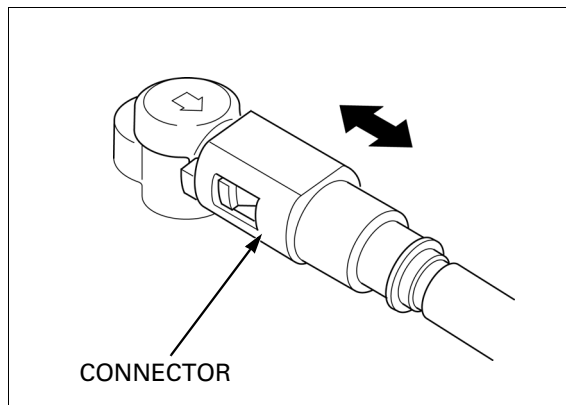

3. Connect the fuel pump 5P connector.

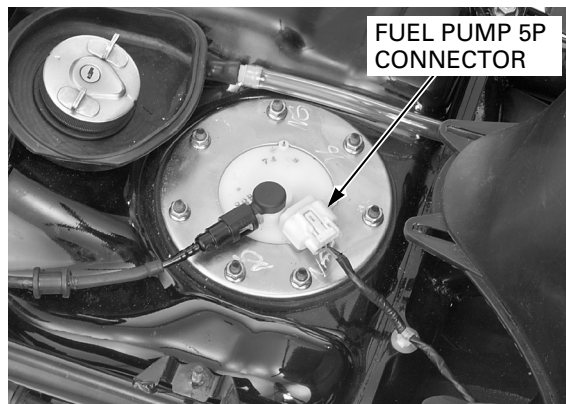

Do not start the engine.

4. Turn the ignition switch "ON".
The fuel pump will run for about 2 seconds, and fuel pressure will rise.
Repeat 2 or 3 times, and check that there is no leakage in the fuel supply system.

Install the following:

- Floor panel side frame plate (page 6-39)
- Floor panel (page 3-11)

