


FUEL TANK

REMOVAL/INSTALLATION

Remove the floor panel (page 3-11).

Remove the bolts and floor panel side frame plate.


Remove the fuel hose clamp bolt from the fuel tank.

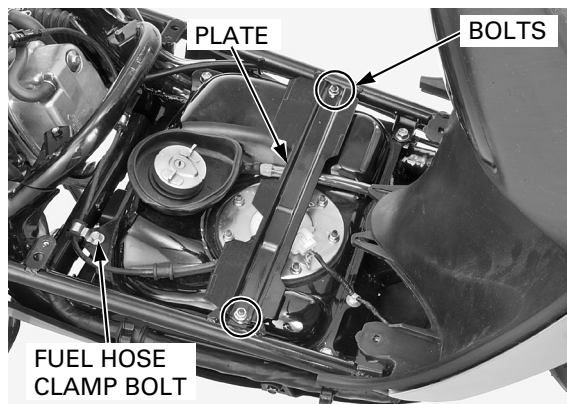

Relieve the fuel pressure and disconnect the quick connect fitting (page 6-32).

Disconnect the fuel pump 5P connector.

Remove the clamp from the fuel tank.

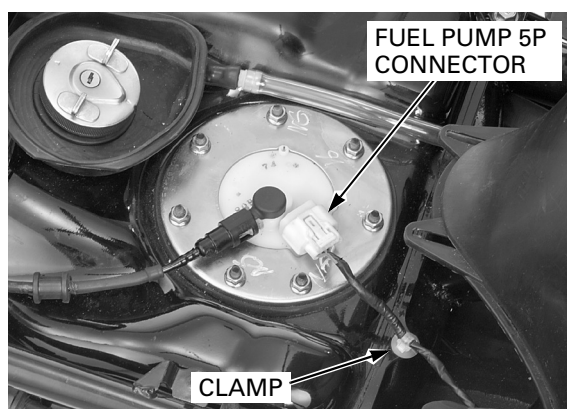

Disconnect the fuel tray drain hose.

Remove the following:

- Rubber
- Five bolts
- Left floor panel side frame mounting bolt
- Floor panel side frames
- Fuel tank

Installation is in the reverse order of removal.

- Route the fuel tank drain hose properly, not to be kinked or bound.
- Connect the quick connect fitting (page 6-33).

TORQUE: Left floor panel side frame mounting bolt
49 N·m (5.0 kgf·m, 36 lbf·ft)

