



FUEL SYSTEM (Programmed Fuel Injection)

6. Turn the ignition switch "ON" then disconnect the jumper wire from the ECT sensor 3P connector while the MIL is blinking (reset receiving pattern) for 10 seconds.

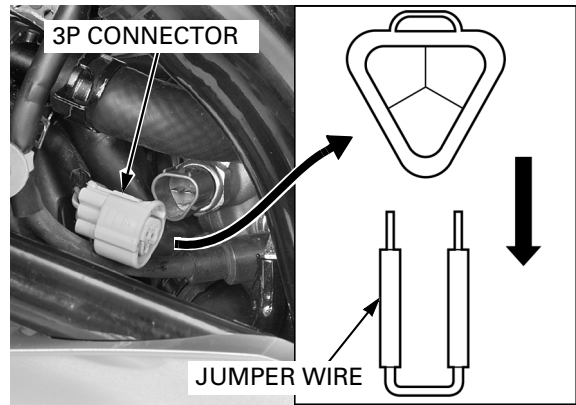


7. Check if the MIL blinks.

After disconnection of the jumper wire, the MIL should start blinking (successful pattern).

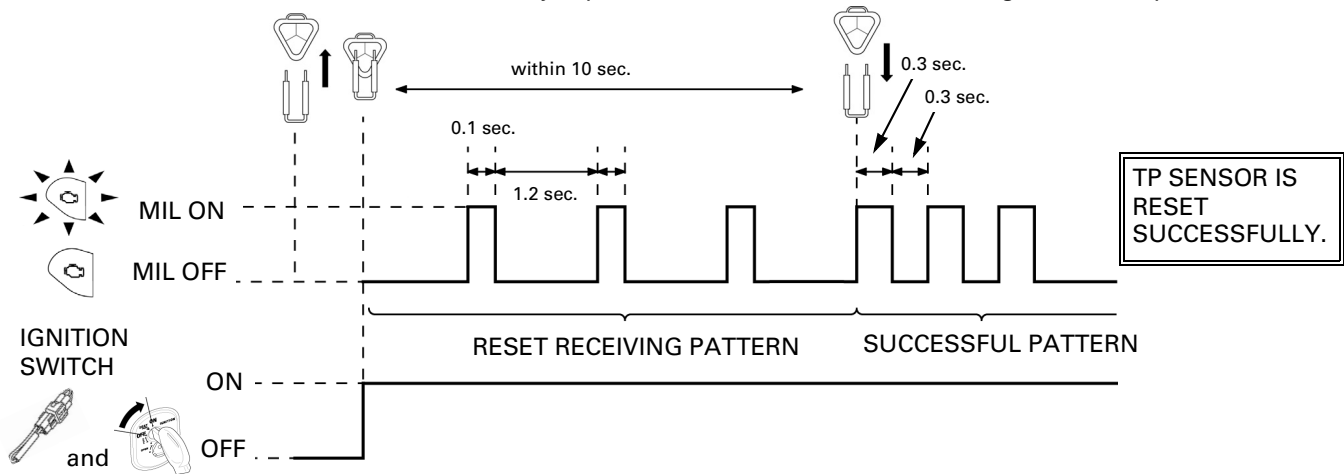

If the jumper wire is connected for more than 10 seconds, the MIL will stay ON (unsuccessful pattern). Try again from the step 4.

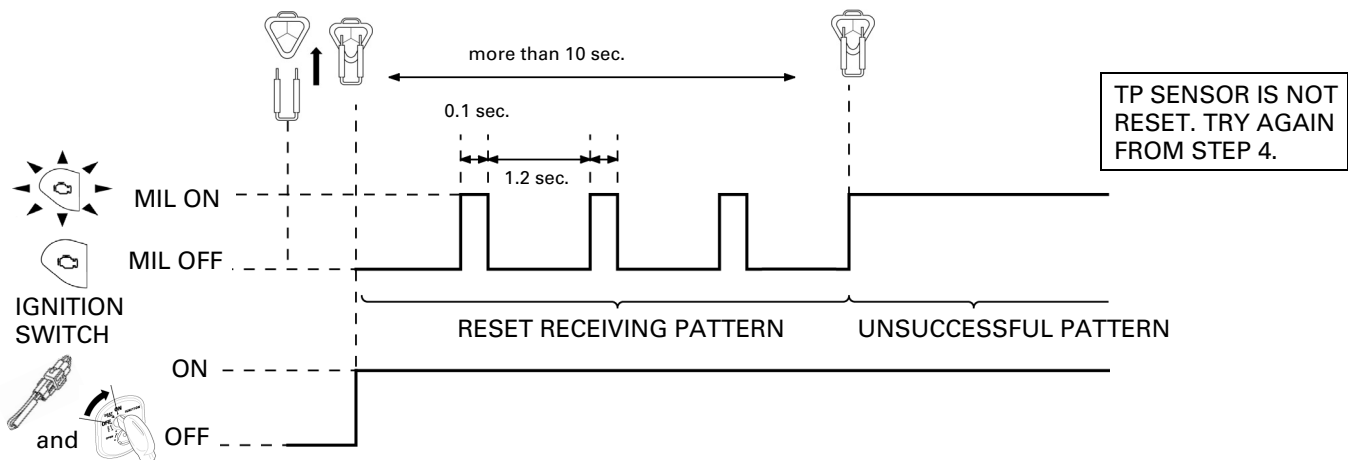

8. Turn the ignition switch "OFF".