

FUEL SYSTEM (Programmed Fuel Injection)

ECM (Engine Control Module)


REMOVAL/INSTALLATION

Remove the front center cover (page 3-4).

Disconnect the ECM 33P connector.

Remove the ECM from the rubber holder.

Installation is in the reverse order of removal.

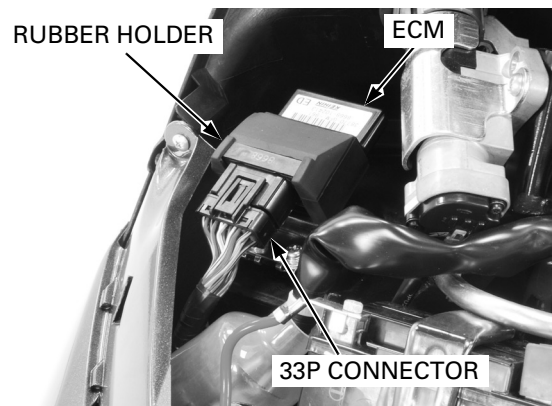

INJECTOR


REMOVAL

Relieve the fuel pressure and disconnect the quick connect fitting (page 6-32).

Before removal, clean around the injector.

Disconnect the injector 2P connector.

Remove the bolts and injector from the intake pipe.

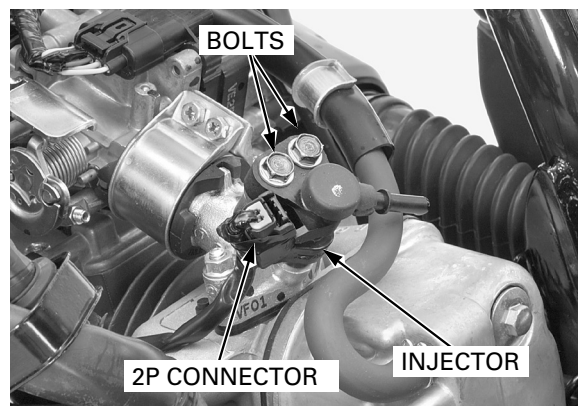

Remove the following:

- Fuel feed pipe
- O-ring
- Seal ring

