


INSTALLATION

Coat the new O-ring and seal ring with engine oil.

Install the O-ring and seal ring to the injector.


- Replace the O-ring and seal ring with new ones as a set.
- Be careful not to damage the O-ring and seal ring.

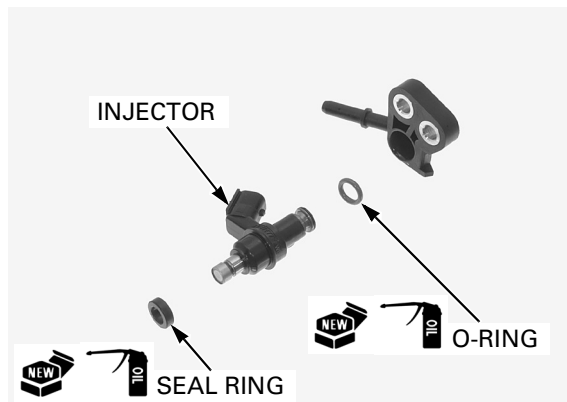

Install the fuel feed pipe to the injector so that connector is between the stopper and body of the feed pipe.

NOTICE

Be careful not to allow dirt and debris between the fuel feed pipe and O-ring.

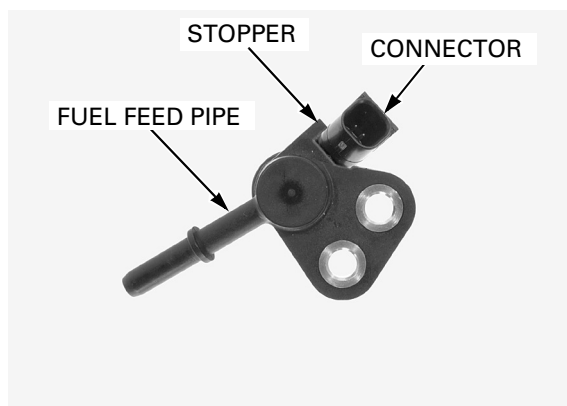

Install the injector to the intake pipe.

NOTICE

Be careful not to allow dirt and debris between the intake pipe and seal ring.

Install and tighten the bolts.

Connect the injector 2P connector.

Connect the quick connect fitting (page 6-33).

