

ENGINE STOP RELAY

REMOVAL/INSTALLATION

Remove the front center cover (page 3-4).

Remove the engine stop relay from the relay connector.

Installation is in the reverse order of removal.



OPERATION INSPECTION

Remove the front center cover (page 3-4).

Turn the ignition switch "ON".

The engine stop relay coil is normal if the engine stop relay clicks.

If you hear the engine stop relay "CLICK", but malfunction indicator lamp (MIL) stays off and fuel pump does not operate for a few seconds, inspect the following:

- Engine stop relay continuity inspection (page 6-62)
- Engine stop relay switch line inspection (page 6-62)
- If the above inspections and the ECM power/ground circuit (page 6-19) are normal, replace the ECM with a new one, and recheck.

If you do not hear the relay "CLICK", inspect the following:

- Engine stop relay coil line inspection (page 6-63)
- Engine stop relay continuity inspection (page 6-62)
- If the above inspections are normal, inspect the bank angle sensor (page 6-52).

