

### COIL LINE INSPECTION

Turn the ignition switch "OFF".

Disconnect the ECM 33P connector (page 6-48).

Turn the ignition switch "ON".

Measure the voltage between the ECM connector of the wire harness side and ground.

**Connection: Brown/Black – Ground**

If the battery voltage appears, the fuel relay coil line is normal.

If the battery voltage does not appear, inspect the following:

- Open circuit in Black/White wire between the engine stop relay and fuel pump relay
- Open circuit in Brown/Black wire between the fuel pump relay and ECM
- Inspect the fuel pump relay continuity (page 6-64)

