



## COOLING SYSTEM

Unhook the clips from the water pipe and slide the water pipe to the stator base side.

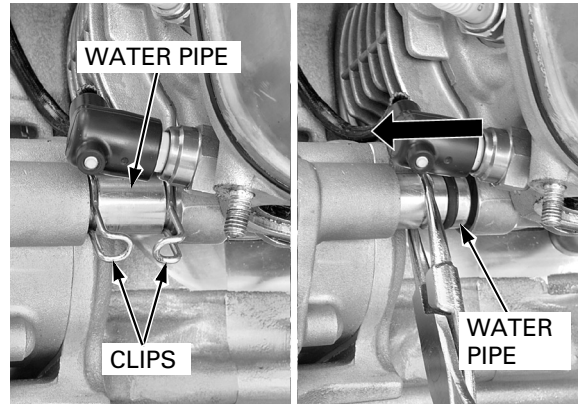


Remove the stator and ignition pulse generator (page 13-4).

Remove the woodruff key.

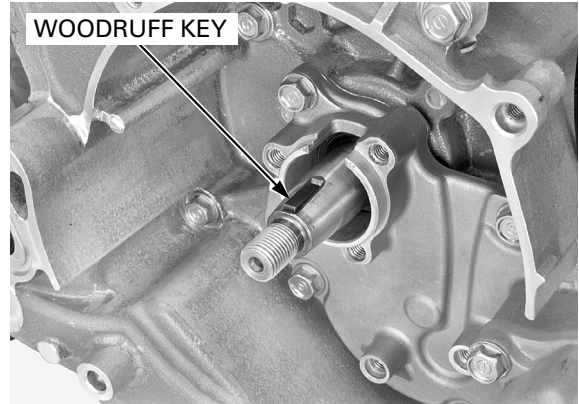

Remove the bolts and the stator base/water pump.

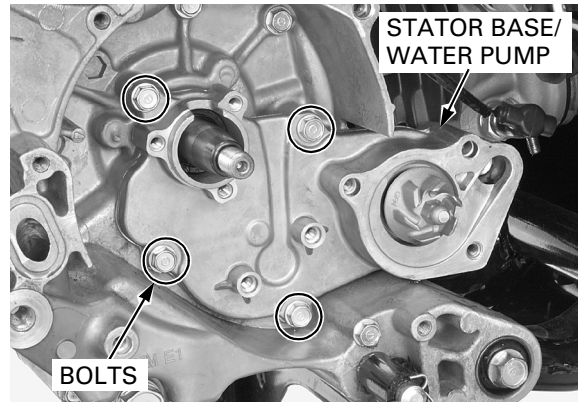

Remove the O-ring from the stator base/water pump.

Remove the dowel pins.

