



Remove the water pipe and O-rings from the stator base/water pump.

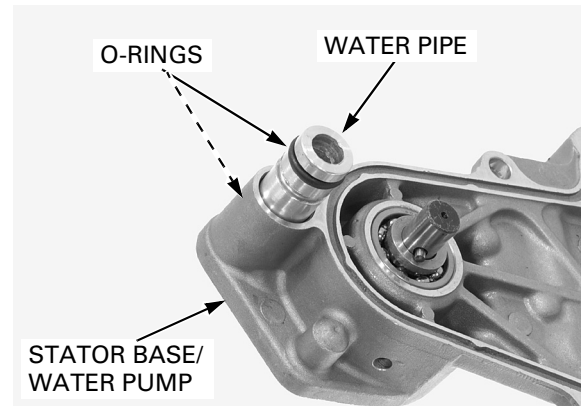

Remove the following:


- Water pump drive sprocket/oil pump shaft
- Drive chain
- Water pump driven sprocket
- Oil pump driven gear

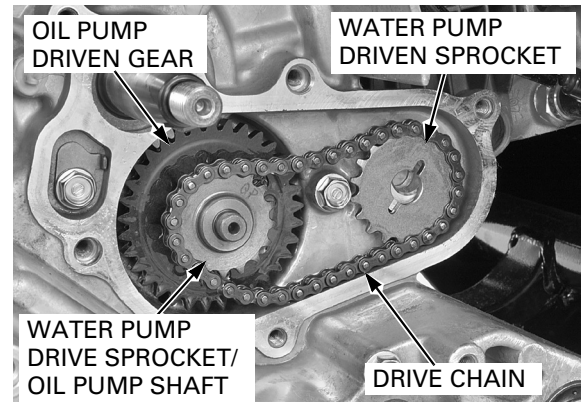

INSPECTION

OIL PUMP DRIVEN GEAR

Check the oil pump driven gear teeth for wear or damage.

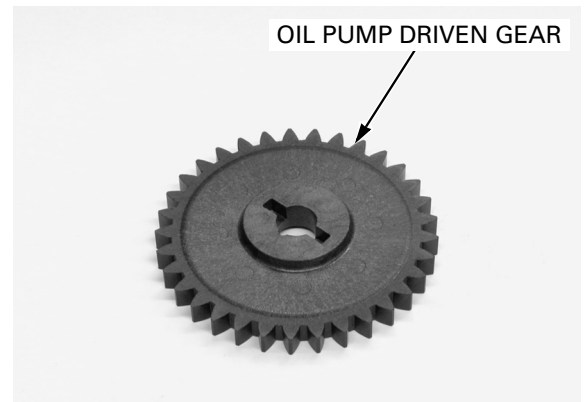

WATER PUMP DRIVE SPROCKET/OIL PUMP SHAFT

Check the water pump drive sprocket teeth for wear or damage.

Check the oil pump shaft and shaft hole of the stator base for wear or damage.

