


ENGINE REMOVAL/INSTALLATION


Loosen the band screw and disconnect the air duct from the left crankcase cover.

Support the engine with jack.
Support the rear side of the frame in upright position and hold the front wheel to keep the scooter stable.

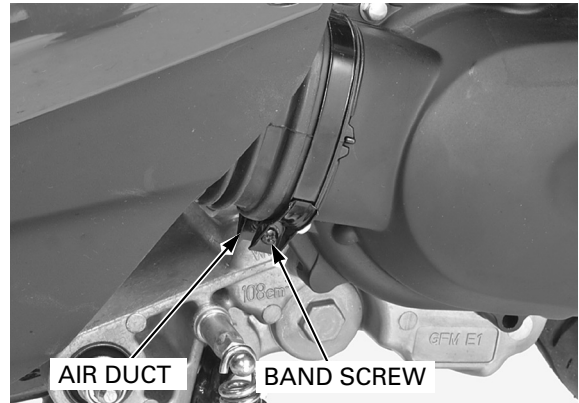


Remove the engine hanger link pivot nut (engine side).
Pull out the engine hanger link pivot bolt (engine side) from right side.

Pull the engine straight back and release the engine from the engine hanger link.

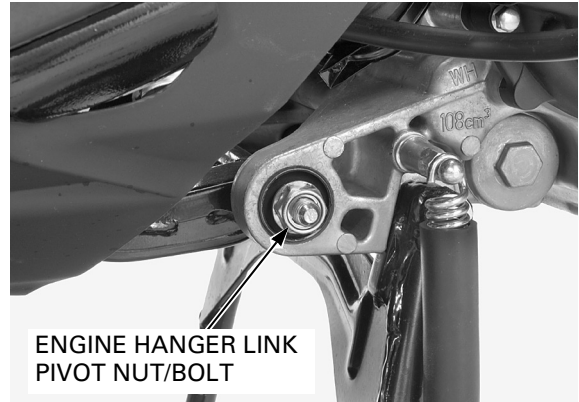

Remove the engine hanger link pivot nut (frame side).
Pull out the engine hanger link pivot bolt (frame side) from right side.

Remove the engine hanger link.

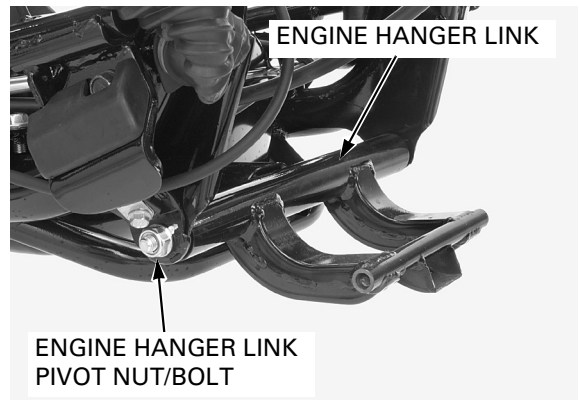

INSPECTION

Check the engine hanger link bushings and stopper rubbers for wear, deterioration or damage.

