


## CYLINDER HEAD/VALVES

### CAM CHAIN GUIDE

#### REMOVAL


Remove the cylinder head (page 9-7).

Remove the cam chain guide.

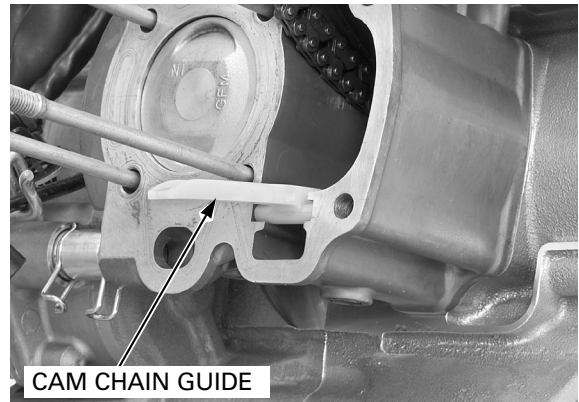

#### INSPECTION

Check the sliding area of the cam chain guide for excessive wear or damage.

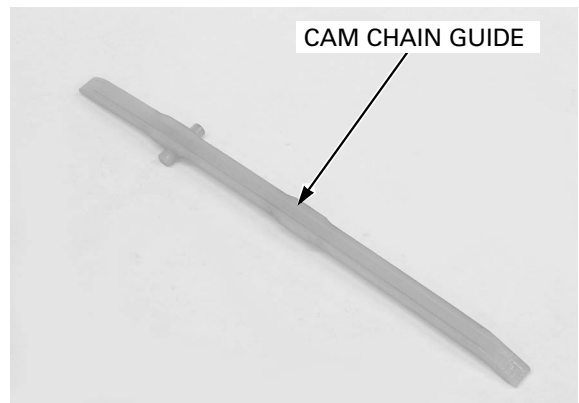

#### INSTALLATION

Install the cam chain guide by aligning the bosses of the cam chain guide and grooves of the cylinder.

Install the cylinder head (page 9-21).

