


INSPECTION

Check the cam chain tensioner lifter operation:


- The tensioner shaft should not go into the body when it is pushed.
- When it is turned clockwise with the tensioner lifter stopper, the tensioner shaft should be pulled into the body. The shaft should protrude from the body as soon as the tensioner lifter stopper is released.

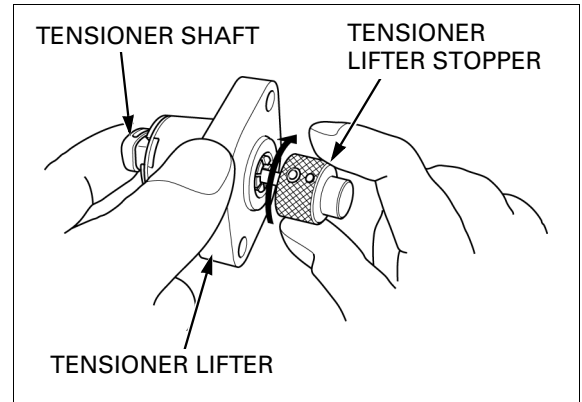

INSTALLATION

Install the tensioner lifter stopper and turn the tensioner shaft clockwise with it to retract the tensioner fully.

Install a new gasket and cam chain tensioner lifter.

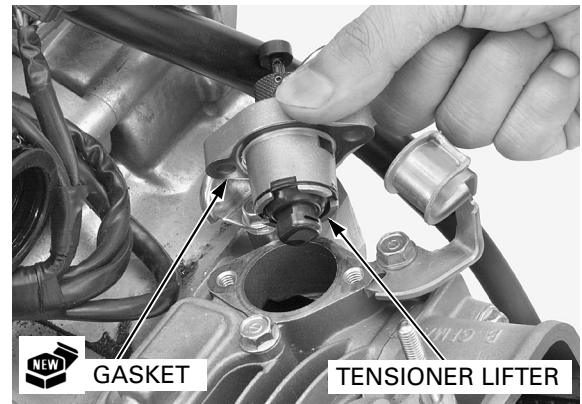

Install and tighten the bolts.
Remove the tensioner lifter stopper.

Coat a new O-ring with engine oil and install it into the cam chain tensioner lifter groove.
Install and tighten the cam chain tensioner lifter screw to the specified torque.

TORQUE: 4 N·m (0.41 kgf·m, 3.0 lbf·ft)

Install the following:

- Throttle body (page 6-41)
- Luggage box (page 3-8)

