

TROUBLESHOOTING

Engine does start but scooter won't move

- Damaged final reduction
- Seized final reduction

Abnormal noise

- Worn, seized or chipped gears
- Worn or damaged final reduction bearing

Oil leak

- Oil level too high
- Worn or damaged oil seal
- Cracked crankcase and/or final reduction case