

FINAL REDUCTION

Apply engine oil to the bearing cavity.

Drive a new countershaft bearing into the left crankcase squarely with its marked side facing up until it is fully seated, using the special tools.


TOOLS:

Driver	07749-0010000
Attachment, 32 x 35 mm	07746-0010100
Pilot, 12 mm	07746-0040200

Drive a new final gear shaft bearings into the left crankcase squarely until it is fully seated, using the special tools.

TOOLS:

Driver	07749-0010000
Attachment, 32 x 35 mm	07746-0010100
Pilot, 15 mm	07746-0040300

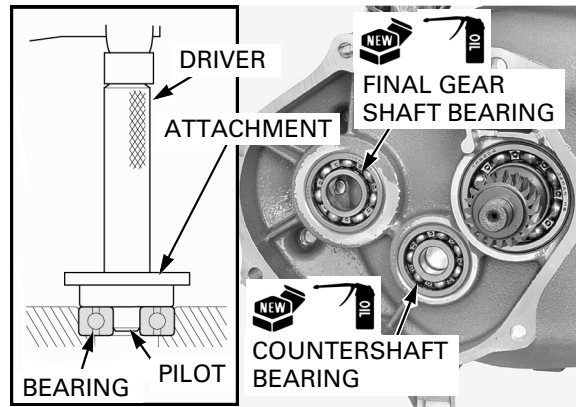

DRIVESHAFT BEARING

Remove the driveshaft using the special tool.

TOOL:

Case puller	07SMC-0010001
--------------------	----------------------

