



Remove the driveshaft bearing using a hydraulic press.

- If the driveshaft bearing remains in the left crankcase, remove it to the right side.

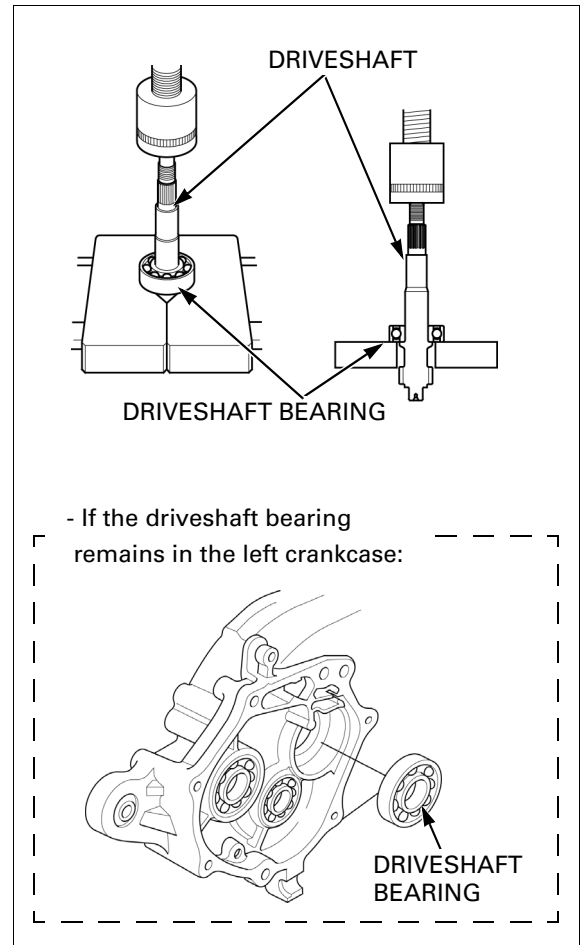

Remove the driveshaft oil seal from the left crankcase.

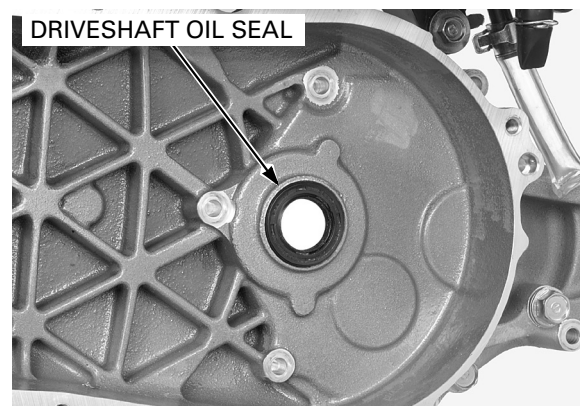

Apply engine oil to the bearing cavity.

Drive a new driveshaft bearing into the left crankcase squarely with its marked side facing up until it is fully seated, using the special tools.

TOOLS:

Driver

07749-0010000

Attachment, 42 x 47 mm

07746-0010300

Pilot, 20 mm

07746-0040500

