

## CRANKCASE/CRANKSHAFT

---

Install the plunger, spring, set plate and tighten the bolt.

Refer to service information (page 14-3) for installation of parts removed to perform crankcase service.

