


## FRONT WHEEL/SUSPENSION/STEERING

Coat a new O-ring with grease and install it into the groove on the speedometer cable.

Connect the speedometer cable while aligning the slot of the speedometer gearbox with the tab of the speedometer cable.

Turn the front wheel by hand and check that the speedometer moves.

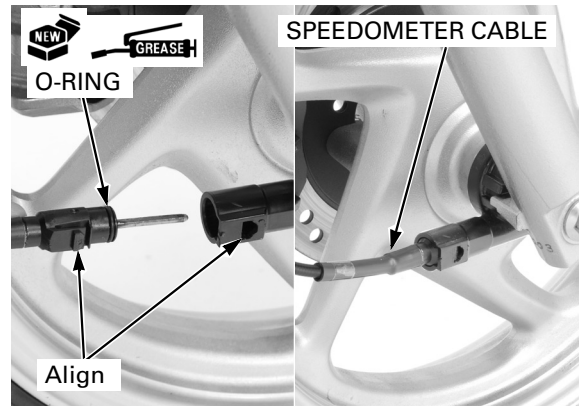

## FORK

### REMOVAL

Remove the following:

- Front wheel (page 15-6)
- Front fender (page 3-4)
- Front cover (page 3-6)

*Support the front brake caliper so it does not hang from the brake hose. Do not twist the brake hose.*

Remove the brake caliper mounting bolts (page 17-20).


Remove the brake hose holder bolt.

When the fork will be disassembled, loosen the fork cap bolt, but do not remove it yet.

Remove the upper fork pinch bolt.

Hold the fork and loosen the lower fork pinch bolt.

Remove the fork from the steering stem.

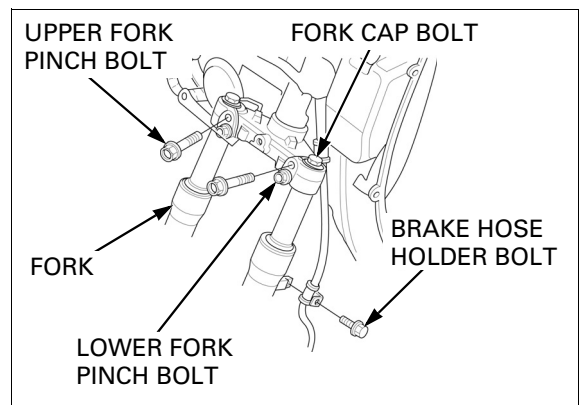


### DISASSEMBLY

Hold the fork slider in a vise with a soft jaws or shop towel.

*Remove the socket bolt after draining the fork fluid.*

Loosen the fork socket bolt, but do not remove yet.

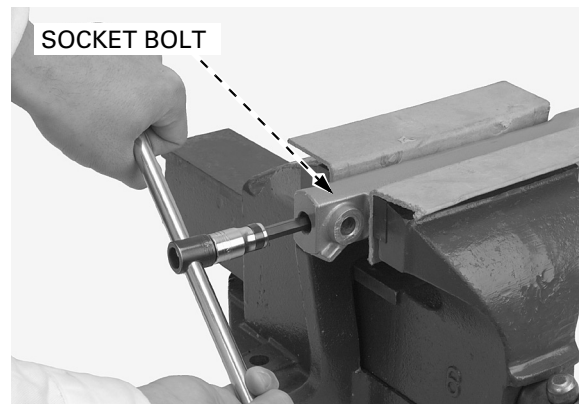

Remove the fork cap bolt and O-ring.

