

## FRONT WHEEL/SUSPENSION/STEERING

Install the upper fork pinch bolt.  
Tighten the upper/lower fork pinch bolts to the specified torque.

**TORQUE: 49 N·m (5.0 kgf·m, 36 lbf·ft)**

If the fork is disassembled, tighten the fork cap bolt to the specified torque.


**TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)**

Install the brake caliper mounting bolt (page 17-23).

Set the brake hose holder and tighten the bolt.

Install the following:

- Front cover (page 3-6)
- Front fender (page 3-4)
- Front wheel (page 15-11)

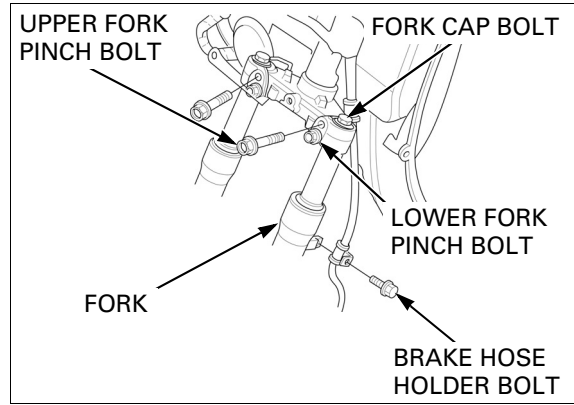

## HANDLEBAR

### REMOVAL


#### BRAKE MASTER CYLINDER

Remove the following:

- Front center cover (page 3-4)
- Front handlebar cover (page 3-6)
- Rear handlebar cover (page 3-7)

*Keep the brake master cylinder upright to prevent air from entering the system.  
Do not twist the brake hose.*

Remove the bolts, holder and brake master cylinder.

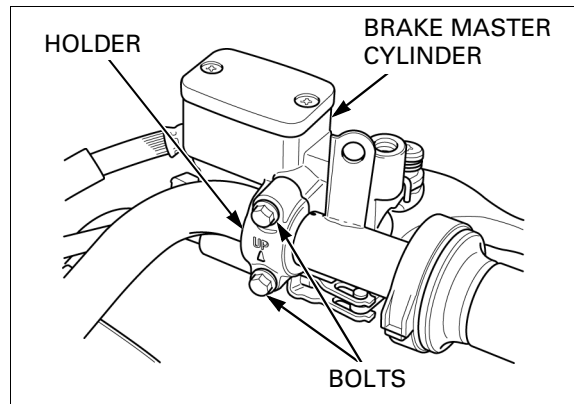

#### THROTTLE HOUSING

Remove the screw and upper throttle housing by releasing its slot from the tab on the lower housing.

Disconnect the throttle cable from the throttle pipe and remove the lower throttle housing.

Remove the throttle pipe from the handlebar.

