
INSTALLATION

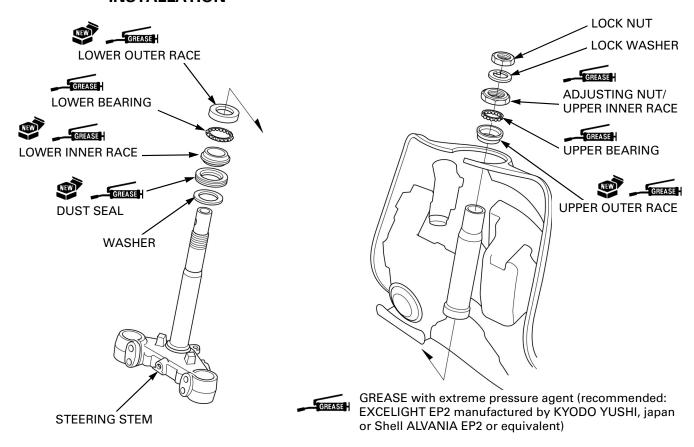

Install the washer to the steering stem.


Do not damage the bearing rolling area of the lower inner race.

Install a new lower inner race using the following tool and hydraulic press.

TOOL:

Inner driver, 30 mm

07746-0030300

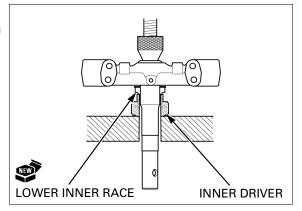

Install a new dust seal to the lower inner race groove.

Apply grease with extreme pressure agent (recommended: EXCELIGHT EP2 manufactured by KYODO YUSHI, japan or Shell ALVANIA EP2 or equivalent) to the dust seal lip.

