## **BRAKE DISC INSPECTION**

Visually inspect the brake disc for damage or crack. Measure the brake disc thickness at several points.

## SERVICE LIMIT: 3.0 mm (0.12 in)

Replace the brake disc if the smallest measurement is less than the service limit.



Measure the brake disc warpage.

## SERVICE LIMIT: 0.30 mm (0.012 in)

If the warpage exceeds the service limit, check the wheel bearings for excessive play.

Replace the brake disc if the wheel bearings are normal.

