

FRONT BRAKE MASTER CYLINDER


REMOVAL

Drain the brake fluid (page 17-5).

Remove the following:

- Front handlebar cover (page 3-6)
- Rear handlebar cover (page 3-7)

Loosen the rear brake adjusting nut until the play of the rear brake cable becomes maximum.

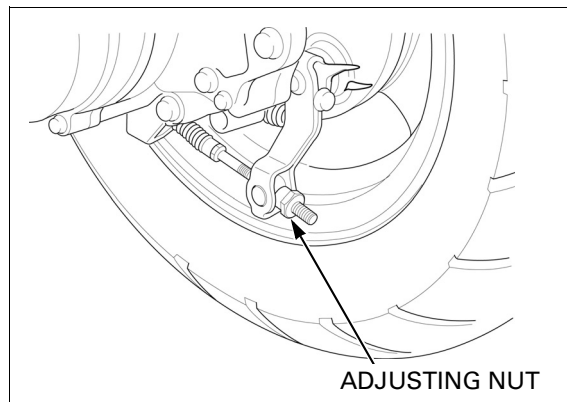


Loosen the lock nut and turn the adjuster until the play of the connecting cable becomes maximum.

Compress the return spring by squeezing the brake lever and disconnect the tip of the connecting cable from the knocker joint.


Remove the return spring from the connecting cable holder.

Turn the adjuster and remove the connecting cable from the connecting cable holder.

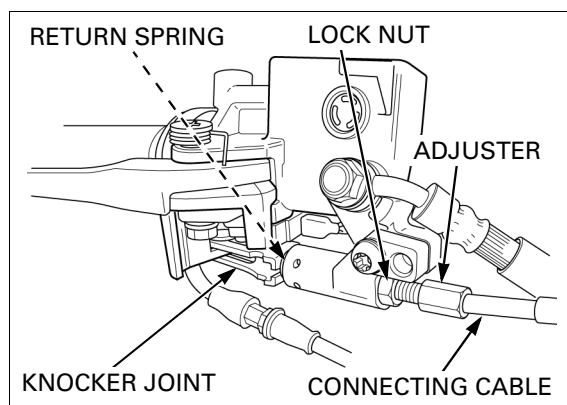

Disconnect the brake light switch connectors.

Remove the oil bolt, sealing washers and brake hose.

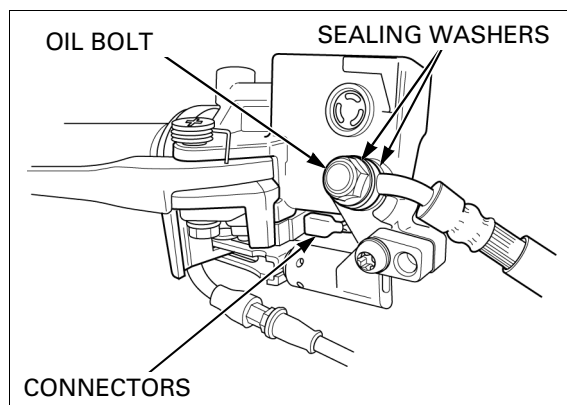

Remove the master cylinder holder bolts, holder and master cylinder.

