

Install the return spring between the hole on the left crankcase and pin on the brake arm.
Install the joint pin on the brake arm.
Connect the brake cable to the joint pin and install the adjusting nut.

Install the rear wheel (page 16-4).

Adjust the rear brake lever freeplay (page 4-17).

