


INHIBITOR RELAY

REMOVAL/INSTALLATION

Remove the front center cover (page 3-4).

Remove the inhibitor relay from the relay (Black) connector.

Installation is in the reverse order of removal.

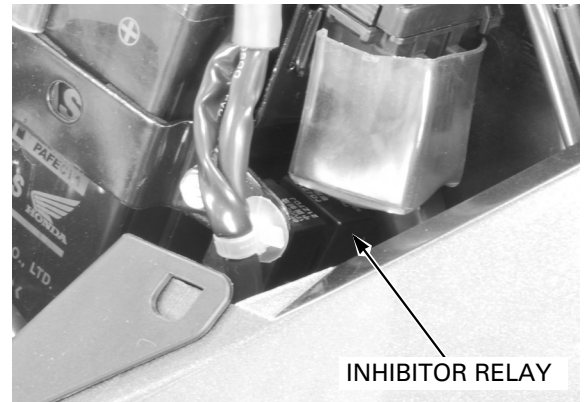

RELAY GROUND LINE INSPECTION

Turn the ignition switch OFF.

Remove the front center cover (page 3-4).

Remove the inhibitor relay (page 20-13).

Check for continuity between the relay connector of the wire harness side and ground.

Connection: Green – Ground

There should be continuity at all time.

