



IGNITION SWITCH

REMOVAL

Remove the front inner cover (page 3-12).
 Disconnect the ignition switch 3P connector.

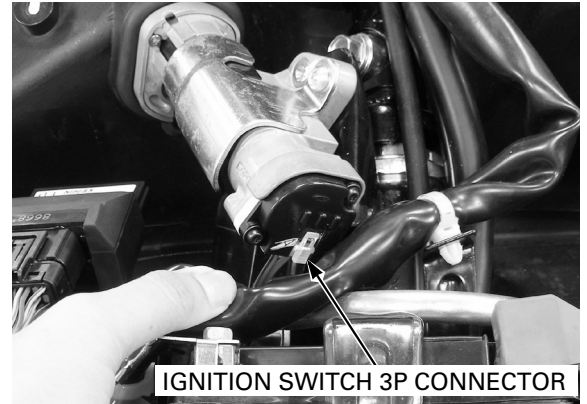

Open the seat lock arm cover and disconnect the seat lock cable from the arm.

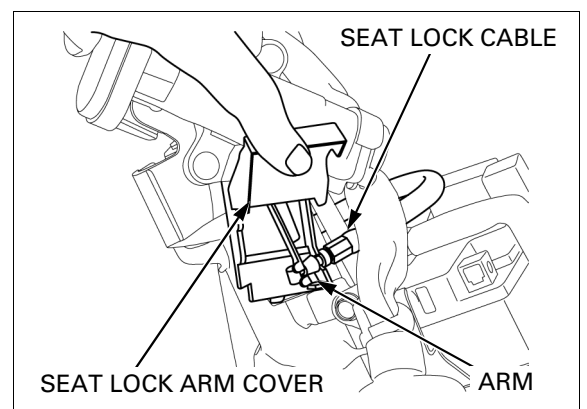

Remove the bolt and key shutter.

Remove the following:

- Mount screws
- Ignition switch
- Socket bolt
- Protector

Installation is in the reverse order of removal.

- Install the new socket bolt and new mount screw.
- When install the key shutter, push that to the ignition switch. If the key shutter floated, there is the case that can not completely insert the key in.

TORQUE: Ignition switch protector socket bolt
 8.5 N·m (0.87 kgf·m, 6.3 lbf·ft)

