24. INDEX

AIR CLEANER4-6	ECT SENSOR	6 52
AIR CLEANER HOUSING6-40	ELECTRIC STARTER SPECIFICATIONS	
ALTERNATOR18-7	EMISSION CONTROL SYSTEMS	1 20
BANK ANGLE SENSOR6-50	ENGINE & FRAME TORQUE VALUES	1 11
BATTERY18-6	ENGINE DOES NOT START OR IS HARD TO	1-11
BATTERY/CHARGING SYSTEM SPECIFICATIONS ··· 1-10	START	22.2
BODY COVER3-9	ENGINE IDLE SPEED	
BODY PANEL LOCATIONS3-2	ENGINE INSTALLATION	
BODY PANEL REMOVAL CHART3-2	ENGINE LACKS POWER	22.2
BRAKE EQUALIZER17-16	ENGINE OIL	4 10
BRAKE FLUID4-16	ENGINE OIL STRAINER SCREEN	
BRAKE FLUID REPLACEMENT/AIR BLEEDING17-5	ENGINE REMOVAL	
BRAKE LIGHT SWITCH	ENGINE STOP RELAY	
LIGHTS/METERS/SWITCHES21-13	EXHAUST PIPE/MUFFLER	
MAINTENANCE··································	FINAL DRIVE OIL	/-15
BRAKE LOCK OPERATION 4-20	FINAL REDUCTION BEARING REPLACEMENT	
BRAKE PAD/DISC17-8	FINAL REDUCTION CASE ASSEMBLY	. 12-1/
BRAKE SHOES/PAD WEAR4-16	FINAL REDUCTION CASE SEPARATION	
BRAKE SYSTEM4-17	FINAL REDUCTION INSPECTION	
BRAKE SYSTEM SPECIFICATIONS1-9	FINAL REDUCTION SPECIFICATIONS	1-8
CABLE & HARNESS ROUTING1-17	FLOOR PANEL	3-11
CAM CHAIN GUIDE9-24	FLOOR PANEL SIDE COVER	
CAM CHAIN TENSIONER LIFTER9-26	FLYWHEEL/STATOR	13-4
CAM CHAIN TENSIONER SLIDER9-25	FORK	
CAMSHAFT/CYLINDER HEAD9-7	FRONT BODY COVER ······	
CENTERSTAND3-14	FRONT BRAKE CALIPER	. 17-20
CHARGING SYSTEM INSPECTION18-6	FRONT BRAKE MASTER CYLINDER	. 17-11
CLUTCH SHOES WEAR4-21	FRONT CENTER COVER	3-4
CLUTCH/DRIVEN PULLEY11-13	FRONT COVER ·······	
COMPONENT LOCATION	FRONT FENDER	
ALTERNATOR ·······13-2	FRONT HANDLEBAR COVER	3-6
BRAKE SYSTEM······17-2	FRONT INNER COVER	3-12
COOLING SYSTEM ·······7-2	FRONT TURN SIGNAL LIGHT	
CRANKCASE/CRANKSHAFT14-2	FRONT WHEEL	15-6
CYLINDER HEAD/VALVES9-2	FRONT WHEEL/SUSPENSION/STEERING	
CYLINDER/PISTON10-2	SPECIFICATIONS	1-9
DRIVE PULLEY/DRIVEN PULLEY/CLUTCH ·······11-2	FUEL LINE	4-5
ENGINE REMOVAL/INSTALLATION······8-2	FUEL LINE INSPECTION	6-32
FINAL REDUCTION ······12-2	FUEL METER/FUEL LEVEL SENSOR	· 21-10
FRONT WHEEL/SUSPENSION/STEERING ··········· 15-2	FUEL PUMP ······	
FUEL SYSTEM (Programmed Fuel Injection)6-2	FUEL PUMP RELAY	
REAR WHEEL/SUSPENSION16-2	FUEL SYSTEM (PGM-FI) SPECIFICATIONS	
CONNECTOR LOCATION	FUEL TANK······	6-39
FUEL SYSTEM (Programmed Fuel Injection) ······ 6-11	GENERAL SPECIFICATIONS	
COOLANT REPLACEMENT7-8	GRAB RAIL/CARRIER ·····	
COOLANT TEMPERATURE METER/ECT SENSOR····21-9	HANDLEBAR	
COOLING FAN7-11	HANDLEBAR SWITCHES	
COOLING SYSTEM4-14	HEADLIGHT	
COOLING SYSTEM FLOW PATTERN7-3	HEADLIGHT AIM ······	
COOLING SYSTEM SPECIFICATIONS1-6	HORN	
CRANKCASE ASSEMBLY14-9	IACV (Idle Air Control Valve)	
CRANKCASE BREATHER4-7	IGNITION COIL	
CRANKCASE SEPARATION	IGNITION SWITCH	
CRANKCASE/CRANKSHAFT SPECIFICATIONS1-8	IGNITION SYSTEM INSPECTION	
CRANKSHAFT INSPECTION14-8	IGNITION SYSTEM SPECIFICATIONS	
CYLINDER10-4	IGNITION TIMING	
CYLINDER COMPRESSION TEST9-6 CYLINDER HEAD COVER9-6	INHIBITOR RELAYINJECTOR	
CYLINDER HEAD/VALVES SPECIFICATIONS1-7	INTAKE PIPE	
	LEFT CRANKCASE COVER	
CYLINDER/PISTON SPECIFICATIONS1-7 DRIVE BELT	LICENSE LIGHT	
DRIVE BELT DRIVE PULLEY/DRIVEN PULLEY/CLUTCH11-6	LIGHTS/METERS/SWITCHES SPECIFICATIONS	
MAINTENANCE4-14	LUBRICATION & SEAL POINTS	
DRIVE PULLEY11-8	LUBRICATION & SEAL FOINTSLUBRICATION SYSTEM DIAGRAM	
DRIVE PULLEY/DRIVEN PULLEY/CLUTCH	LUBRICATION SYSTEM SPECIFICATIONS	
SPECIFICATIONS1-8	LUGGAGE BOX	
ECM (Engine Control Module)6-48	MAIN RELAY	
ECM POWER/GROUND CIRCUIT INSPECTION6-19	MAINTENANCE SCHEDULE	
ECM TERMINAL ARRANGEMENT6-7	MIL CIRCUIT INSPECTION	6-31
		501