

CARBURETOR REMOVAL

▲WARNING



- *Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.*
- *Wipe up spilled gasoline at once.*

Remove the fuel tank (page 2-5).

Remove the screw and throttle cable guide from the carburetor.
Disconnect the throttle cables from the throttle drum.

Place a suitable gasoline container under the drain tube and loosen the drain screw to drain the fuel.
Loosen the carburetor insulator band screw and connecting tube band screw.

Remove the carburetor to the right.

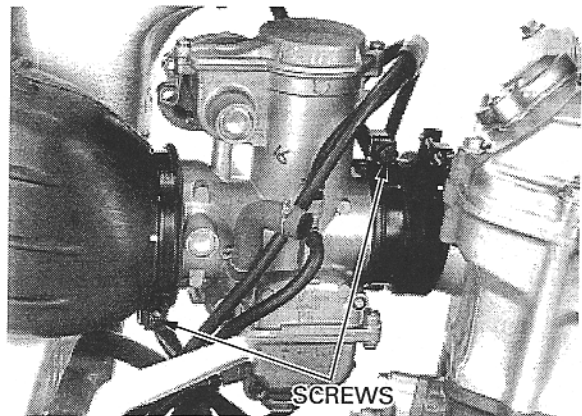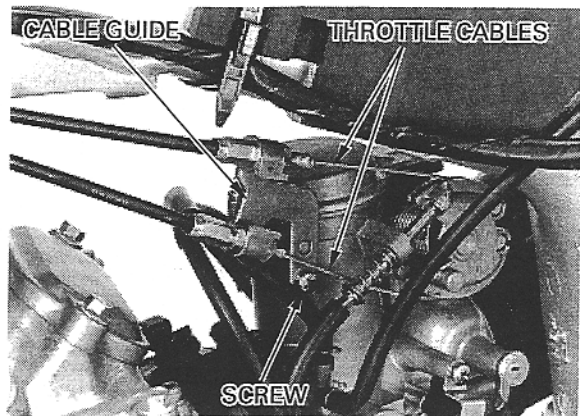

CARBURETOR DISASSEMBLY

Remove the bracket screw.
Remove the overflow tube, drain tube, air vent tubes and fuel line from the carburetor.

