




(Type I)

1. Place the motorcycle on its center stand.
2. Raise the front wheel off the ground by placing a support block under the engine.
3. Remove the speedometer cable (1) by removing the screw (2).
4. Remove the front brake adjusting nut (3) and remove the front brake cable (4) from the brake arm (5).
5. Remove the front axle nut cap (6).
6. Remove the front axle nut (7).
7. Remove the front axle shaft (8), front wheel and side collar.

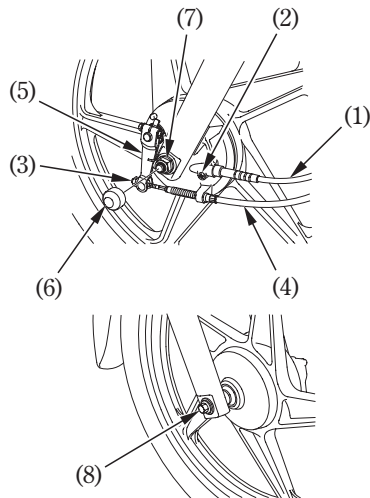

- | | |
|-------------------------------|------------------------|
| (1) Speedometer cable | (5) Brake arm |
| (2) Screw | (6) Front axle nut cap |
| (3) Front brake adjusting nut | (7) Front axle nut |
| (4) Front brake cable | (8) Front axle shaft |

