


PAIR CHECK VALVE INSPECTION

Remove the following:

- fuel tank (page 5-3)
- air cleaner housing (page 5-4)

Remove the bolt and PAIR control valve with the tubes connected.


Disconnect the air injection hose from PAIR check valve cover.

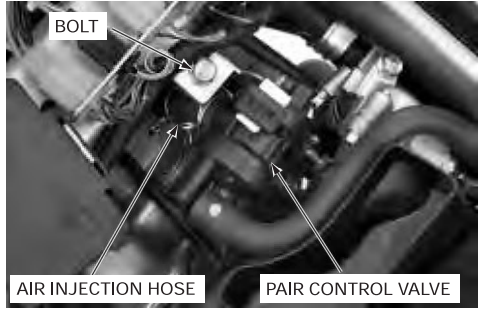

Remove the two bolts and PAIR check valve cover from the cylinder head.

Check the reed for damage or fatigue. Replace if necessary.

Replace the PAIR check valve if the seat rubber is cracked, deteriorated or damaged, or if there is clearance between the reed and seat.

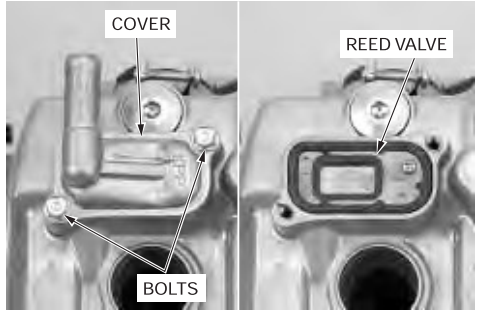

Install the PAIR check valve and cover onto the cylinder head cover.

Install and tighten the two bolts to the specified torque.

TORQUE: 5.2 N·m (0.53 kgf·m, 3.8 lbf·ft)

Install the removed parts in the reverse order of removal.

