

Rear Trunk

To open:

Pull the rubber retainers up to release the hooks.

See page 35, Loading.

To close:

Close the lid and secure the rubber retainers.

CAUTION:

- * Pulling the rubber retainer too hard can damage or break the retainer.
- * Loose cargo can damage the trunk or the cargo. After placing the cargo in the trunk, be sure to secure it with a net or tie down.
- * The trunk room may be heated at high temperature due to exhaust gases, etc. Do not store articles which are susceptible to heat.

Always balance the cargo load before riding. Refer to loading, pages 35, 37.

Weight limit: 66 lbs. (30 kg)

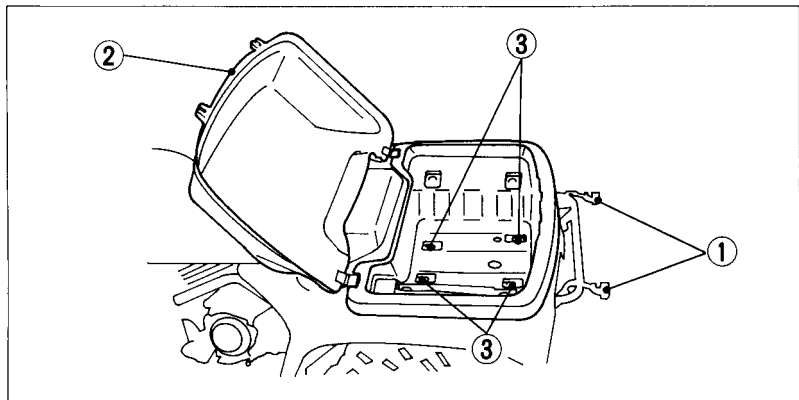


Fig. 2-19

(1) Rubber retainers

(2) Trunk lid

(3) Hook