


If You Have a Flat Tire

- Align the index line (3) of the front axle shaft with the recessed surface (4) of the fork leg.

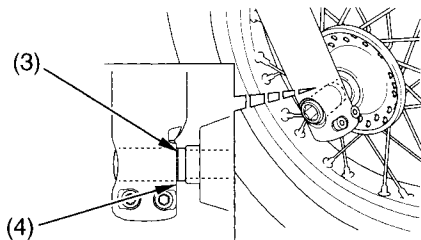

- (3) index line
(4) surface

- Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.
- Tighten the axle pinch bolts to the specified torque:
16 lbf·ft (22 N·m , 2.2 kgf·m)

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.