




CLUTCH/CLUTCH ARM

CLUTCH PLATE INSPECTION


Check for plate warpage on a surface plate, using a feeler gauge.

SERVICE LIMIT: 0.20 mm (0.008 in)

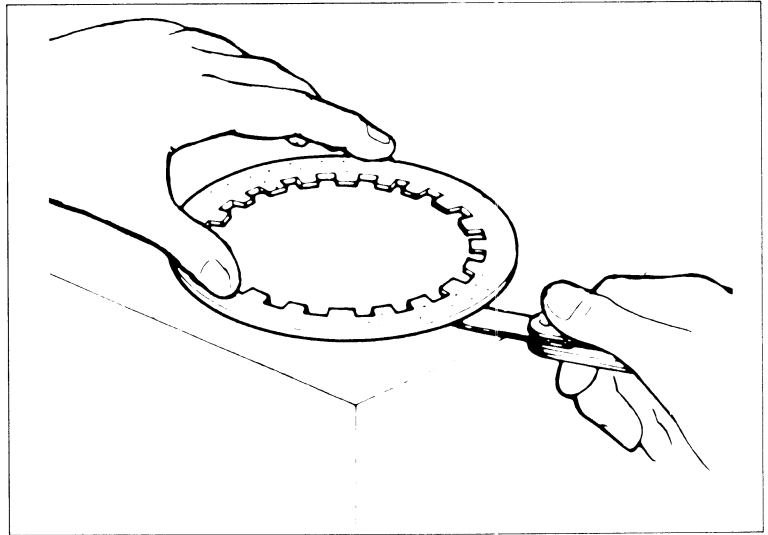

CLUTCH OUTER INSPECTION

Check the slots in the outer drum for nicks, cuts or indentations made by the friction discs.

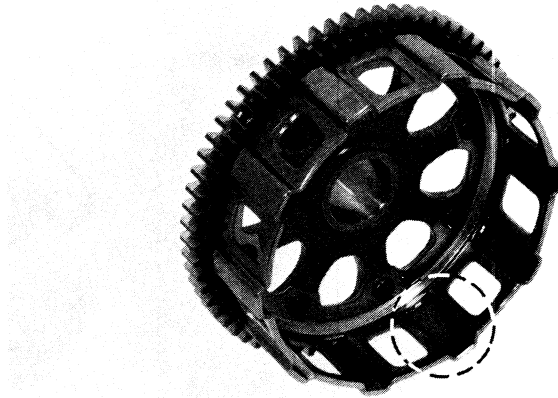

Check each needle bearings and gear for wear or damage.

BEARINGS

