


# Starting & Stopping the Engine

---

4. About 5 seconds after the engine starts, push the choke knob down all the way to fully OFF (B).
5. If idling is unstable, open the throttle slightly.

High Air Temperature 35°C (95°F) or above

## LEFT HANDLEBAR

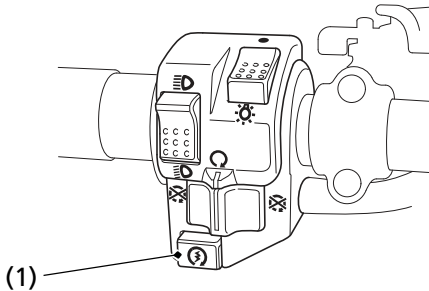

(1) start button

1. Do not use the choke.
2. With the throttle slightly open, press the start button (1).

Low Air Temperature 10°C (50°F) or below

1. Follow steps 1 – 2 under “Normal Air Temperature.”
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob is at fully OFF (B).