


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the front brake cable (1) and speedometer cable (2) from the wheel.
3. Remove the cotter pin (3) and axle nut (4) and pull out the front axle (5).
4. Remove the front wheel.
5. To install, reverse the removal procedures. Adjust the front brake.

CAUTION: Always replace the used cotter pins with new ones.
Axle nut tightening torque: 3.0–4.0 kg-m (22–29 lbs-ft).

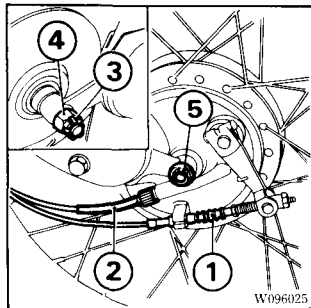

Desmontaje de la rueda delantera

1. Levante la rueda delantera del suelo colocando un soporte debajo del motor.
2. Desconecte el cable del freno delantero (1) y el cable del indicador de velocidad (2) desde la rueda.
3. Quite la clavija hendida (3) y la tuerca del eje (4) y retire el eje delantero (5).
4. Quite la rueda delantera.
5. Para remontar, haga lo contrario. Ajuste el freno delantero.

PRECAUCION: Siempre reemplace la clavija hendida por una nueva cada vez que se desmonte la rueda delantera.

Torsión de ajuste para la tuerca de eje : 3,0–4,0 kg-m.