


Brake pads:

Inspect the pads visually to determine the pad wear.

If the pad (1) is worn to the red line (2), replace all front pads as a set. (CB250NDX)

Inspect the pads visually to determine the pad wear. If either pad (1) wears to the wear line (2), replace both pads. (CB400N)

NOTE: Use only genuine Honda replacement friction pads offered by authorized Honda dealers or its equivalent. When the brake service is necessary, consult your Honda dealer.

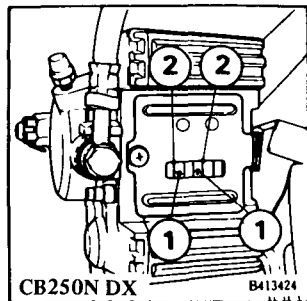

Zapatas del freno:

Inspeccione visualmente las zapatas para determinar su desgaste.

Si la zapata (1) está desgastada hasta la línea roja (2), reemplace todas las zapatas delanteras como un conjunto. (CB250NDX)

Inspeccione visualmente las zapatas para determinar su desgaste. Si una de las zapatas (1) estuviese desgastada hasta alcanzar la línea de desgaste (2), cambie ambas zapatas. (CB400N)

NOTA: Utilice sólo zapatas de fricción de repuesto genuinas de HONDA. Cuando necesite servicio de mantenimiento para los frenos, consulte con su agente HONDA.

