


Battery Care

Inspecting and maintaining the electrolyte level should be performed at the mileage intervals indicated in the Maintenance Schedule (page 137) and Pre-ride Inspection (page 64). The battery is accessible by removing the side cover. The electrolyte lever must be maintained between the upper (1) and lower (2) level marks. If low, add distilled water to raise the levels. Use a syringe or plastic funnel.

CAUTION: When installing the battery, route the battery breather tube as shown in the figure and be careful not to bend or twist the tube.

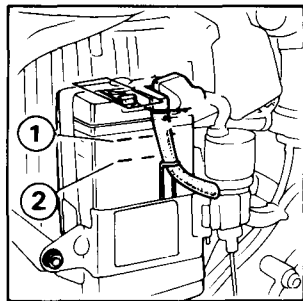

Mantenimiento de la batería

La inspección del nivel de electrólito de la batería y, su reposición, deberán efectuarse tan frecuentemente como se indica en el Programa de Mantenimiento (pág. 137), y en la sección “Inspección antes de la puesta en marcha” (pág. 64). La batería es accesible desmontando la cubierta lateral. El nivel del electrólito deberá estar entre la marca superior (1) y la inferior (2) del nivel. Si el nivel está más bajo que lo indicado, agregue agua destilada. Utilice una jeringa o embudo plástico.

PRECAUCION: Al instalar la batería, coloque la tubería de respiradero de la batería como se indica en la ilustración y tenga cuidado de no doblar ni torcer la tubería.