


## NOTES:

- During acceleration, engine RPM indicator needle may be allowed to briefly enter the red zone. However, the motorcycle must not be operated in the red zone ⑧ for any length of time and must NEVER be operated beyond it.
- Use the tripmeter to calculate mileage on trips, exact periods of time, etc. Reset to zero with the knob ⑨.

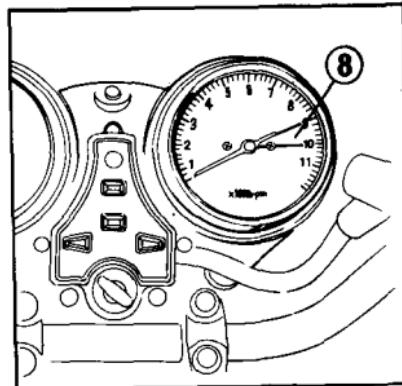

---

## NOTAS:

- Durante la aceleración se permite que la aguja del tacómetro entre brevemente en la zona roja ⑧. Pero no deberá correr la motocicleta en el régimen en que la aguja del tacómetro se quede en la zona roja en cualquier duración de tiempo, ni deberá sobrepasar la zona roja.
- Utilizar el cuenta-kilómetro para calcular el kilometraje del recorrido, exacto período de tiempo, etc. Reposicionar a cero con la perilla ⑨.

