


## Rear Wheel Removal

**NOTE:** To remove the rear wheel of the long fender model, removing the seat and rear fender are required.

1. Place the motorcycle on its center stand.  
Loosen the lock nuts (1) and chain adjusters (2).
2. Remove the cotter pin (3).  
Loosen the axle nut (4), pull down the adjusters (2) and remove the stoppers (5).

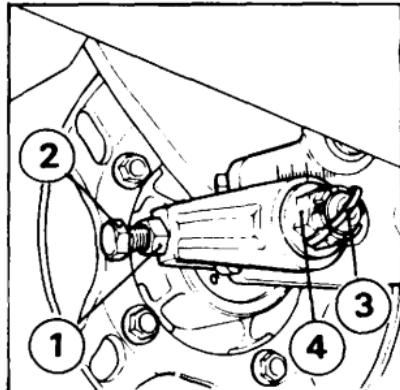

## Desmontaje de la rueda trasera

**NOTA:** Para desmontar la rueda trasera del modelo con guardabarros largo, es necesario desmontar el asiento y el guardabarros trasero.

1. Apoye la motocicleta sobre su soporte central.  
Afloje las tuercas de seguridad (1) y los ajustadores de la cadena (2).
2. Quite la chaveta (3). Afloje la tuerca del eje (4), tire hacia abajo de los ajustadores (2) y quite los detenedores (5).

