

## Ignition Switch


The ignition switch is located directly below the indicator panel.

**OFF:** All electric circuits open. Engine cannot be started. Key can be removed.

**ACC:** All electric circuits are off except for ACC terminal. Key cannot be removed.

**ON:** All electric circuits closed. Engine and light can be operated. Key cannot be removed.

**P (PARKING):** All electric circuits open except for taillight and position light. Key can be removed.

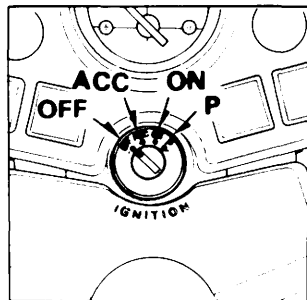

---

## Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

**OFF:** Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

**ACC:** Todos los circuitos eléctricos estarán abiertos menos el del terminal ACC. No se puede retirar la llave.

**ON:** Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

**P (ESTACIONAMIENTO):** Todos los circuitos eléctricos están cerrados, excepto el de luz trasera y lámpara indicadora de posición. Se puede retirar la llave.