

LIGHTING-POSITION LIGHT SWITCH

The lighting-position switch (1) is located below the patrol switch. The head light, and position light are turned on and off with this switch when the ignition switch is "ON".

(ON) Headlight, position light and taillight ON.

(P) Position light and taillight ON.

(OFF) Headlight, position light and taillight OFF.


HEADLIGHT DIMMER SWITCH

The headlight beam (2) is switched with this switch when the headlight is "ON".

(Hi) High beam ON.

(Lo) Low beam ON.

In either position, the position light and taillight are kept ON.

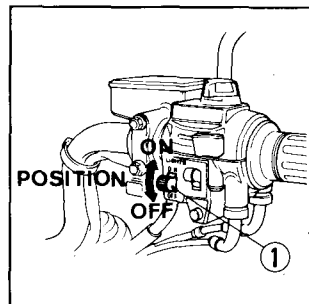

CONMUTADOR DE LA LUZ DE POSICION

El conmutador de la luz de posición está situado debajo del interruptor de patrulla. Las luces del faro delantero y la luz trasera se encienden y apagan con este conmutador cuando esté abierto el interruptor de encendido (ON).

(ON) Luces del faro, de posición y trasera encendidas.

(P) Luz de posición y del faro encendidas.

(OFF) Luces del faro, de posición y trasera apagadas.

INTERRUPTOR DE CAMBIO DE LUCES

Se cambian las luces del faro (2) con este interruptor cuando el faro esté encendido (ON).

(Hi) Luz larga conectada

(Lo) Luz corta conectada

En cualquiera de estas dos posiciones, las luces de posición y trasera se mantienen encendidas (ON).

