


Rear Brake Lock

Be sure to keep the rear brake lock is applied while starting and warming up the engine.

To apply the brake lock:

1. Depress the rear brake pedal.
2. While holding the rear brake pedal down, pull up on the rear brake lock lever (1).

NOTE: The rear brake lock will not be applied if the rear brake is not adjusted properly (page 72).

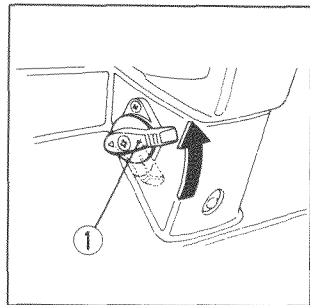

Bloqueo del freno trasero

Cerciorarse de mantener aplicado el bloqueo del freno trasero al poner en marcha o calentar el motor.

Para aplicar el bloqueo del freno:

1. Presionar el pedal del freno trasero.
2. Mientras se presiona hacia abajo el pedal del freno trasero, tirar hacia arriba de la palanca de bloqueo del freno trasero (1).

NOTA: El bloqueo del freno trasero no se aplicará si el freno trasero no está bien ajustado (página 72).