


Brake pads:

Visually inspect the pads diagonally from the front during all regular service intervals to determine the pad wear. If the pads wear to the wear grooves (1), both pads must be replaced. Make sure there are no fluid leaks. Check for deterioration or cracks in the hose and fittings.

NOTE: Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary consult your Honda dealer.

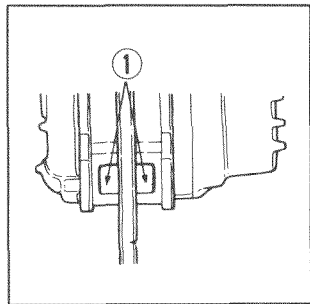

Zapatas del freno:

Inspeccionar visualmente en diagonal las zapatas desde la parte delantera durante todos los servicios de mantenimiento para poder determinar su desgaste. Ambas pastillas deberán cambiarse si se desgastan hasta las ranuras de desgaste (1). Cerciorarse de que no hay fugas de fluido. Comprobar que las mangueras y guarniciones no estén deterioradas ni rotas.

NOTA: Utilice sólo las zapatas de repuesto genuinas de HONDA. Cuando sea necesario efectuar trabajos de mantenimiento para los frenos, consulte con su agente HONDA.