

Spark Plug


Specified spark plug:

Standard: DPR6EA9 (NGK) X20EPR-U9 (ND)

Optional spark plugs: DPR5EA9 (NGK) X16EPR-U9 (ND)

DPR7EA9 (NGK) X22EPR-U9 (ND)

1. Disconnect the spark plug cap and remove the plug with the special wrench provided in the tool kit.
2. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion of deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.
3. Measure with a feeler gauge and adjust to 0.8–0.9 mm (0.032–0.04 in) (1) by bending the side electrode (2). Do not overtighten.

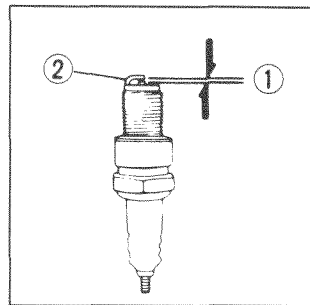

Bujía

Bujía del encendido especificada:

Normal: DPR6EA9 (NGK) X20EPR-U9 (ND)

Bujías opcionales: DPR5EA9 (NGK) X16EPR-U9 (ND)

DPR7EA9 (NGK) X22EPR-U9 (ND)

1. Desconectar el casquete de la bujía y sacar la bujía con la llave especial del juego de herramientas.
2. Inspeccione los electrodos y partes en porcelana del centro para ver si hay depósitos, erosión o suciedad de carbón. Reemplace la bujía si está excesivamente corroída o manchada. Utilice un limpiador de bujía para la limpieza de la bujía o un cepillo de alambre.
3. Reajuste la separación de los electrodos a 0,8–0,9 mm (1). Midala con un calibrador de espesory ajustela doblando el electrodo lateral (2) sólo. No apriete excesivamente.