


STARTING THE ENGINE

1. Turn the fuel valve to ON.
2. Insert the key in the ignition switch and turn to ON.
3. Shift the transmission into neutral. The neutral indicator (green) should go on.
4. Make sure the engine stop switch is in "RUN".
5. Raise the choke lever (1) to full closed position (A), if the engine is cold.

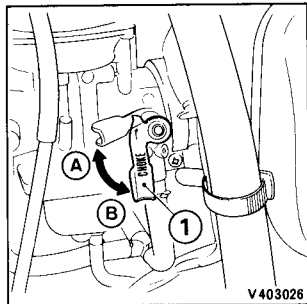

ARRANQUE DEL MOTOR

1. Coloque la palanca del grifo de combustible en la posición ON.
2. Inserte la llave del interruptor del encendido y colóquela en posición ON.
3. Coloque la palanca de mando de transmisión en el punto muerto. Revise si se enciende la lámpara indicadora de neutro (Verde).
4. Asegúrese de que el interruptor de parada del motor está en posición "RUN".
5. Levante la palanca de estrangulador (1) hacia la posición completamente cerrada (A), cuando el motor esté frío.