


Front Brake

Brake fluid:

It is important that proper level of brake fluid be maintained in the reservoir. Remove the cap, washer and diaphragm. Fill with SAE J1703 Brake Fluid up to level mark (1) inside the reservoir. Reinstall the diaphragm, washer and cap securely. Whenever the level falls near the bottom of the reservoir check the brake pads for wear (see page 82). If the brake pad wear does not exceed the limits, this will usually indicate fluid leak. Consult nearest Honda dealer.

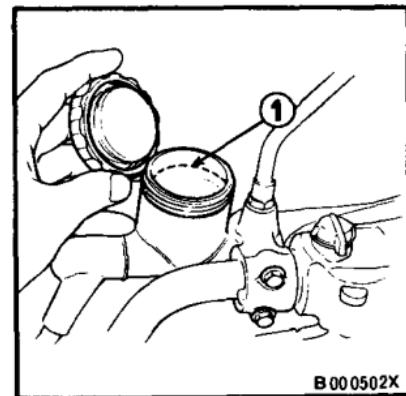

B 000502X

Freno delantero

Líquido de freno:

Es importante que el líquido sea siempre mantenido al nivel predeterminado en el depósito. Quite la tapa, arandela y diafragma. Llene con el Líquido de Freno SAE J1703 hasta la marca de nivel (1) que se encuentra en el interior del depósito. Remont el diafragma, arandela y tapa y fijelos firmemente. Cada vez que se observe que el nivel caiga hasta el fondo del depósito, revise el estado de desgaste de las zapatas de freno (vea pág. 82). Si el desgaste de las zapatas no excede al límite, esto por lo usual indica una fuga del líquido. Consulte con su distribuidor HONDA para su servicio.