


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support under the engine.
2. Disconnect the speedometer cable (2) by removing the screw (1).
3. Remove the nuts (3) and axle holders (4). Remove the front wheel.

NOTE: Do not depress the brake lever when the wheel is removed as this causes the caliper piston to come out, spilling brake fluid. This calls for servicing of the brake system.

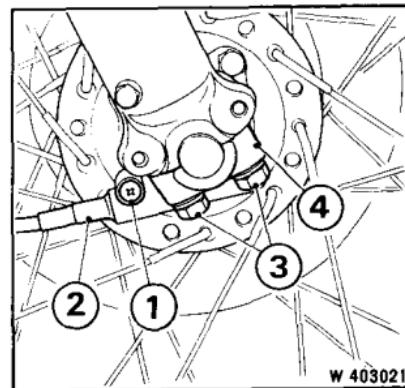

Desmontaje de la rueda delantera

1. Levante la rueda desde el suelo colocando un soporte debajo del motor.
2. Desconecte el cable (2) del indicador de velocidad quitando el tornillo (1).
3. Quite las tuercas (3) y los porta-ejes (4). Luego, desmonte la rueda delantera.

NOTA: No oprima la palanca del freno cuando la rueda esté desmontada, porque tal acción causa el pistón del calibrador que salga afuera, provocando una pérdida de líquido de freno. En tal caso, todo el sistema de frenaje deberá revisarse.