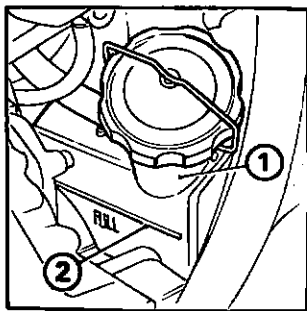


**Inspection:**

Check the coolant level in the reserve tank (1) when the engine is at normal operating temperature. If the level is below the "FULL" mark (2), top-up with coolant. If there is no coolant in the reserve tank, check for leaks.

**WARNING:** Never remove the radiator cap when the engine is hot. The coolant is under pressure and severe scalding could result.

**Inspección:**

Revise el nivel del líquido de refrigeración del depósito de reserva (1), cuando el motor esté en la temperatura normal de funcionamiento. Si el nivel está más bajo que la marca FULL (2), agregue líquido de refrigeración. Si no hay líquido en el depósito de reserva, revise el depósito para ver si hay alguna fuga.

**ADVERTENCIA:** No quitar nunca el tapón del radiador cuando el motor esté caliente ya que podrían causarse serios daños o un accidente.