


## Air Cleaner Servicing

The air cleaner should be serviced at regular intervals. When riding in dusty areas, more frequent service may be necessary.

1. Remove the seat and air cleaner cover (1).
2. Remove the cleaner element (2) and clean by tapping, brushing lightly with a soft brush and then blowing from the outside with an air line.

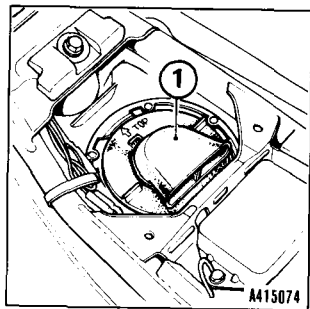

## Limpeza del filtro de aire

El filtro de aire deberá ser inspeccionado en intervalos regulares. Cuando monte en áreas polvorosas, será necesario inspeccionarlo y limpiarlo más frecuentemente.

1. Desmonte el asiento y la cubierta del filtro de aire (1).
2. Quite el elemento del filtro (2) y límpielo dando ligeros golpecitos, pasando un cepillo suave y luego soplando el aire comprimido del exterior.

