

## Fuse Replacement

The fuse box (1) is located between ignition switch and instrument panel.


Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

**WARNING:** Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

(1) Fuse box

(2) Spare fuse

(3) Main fuse

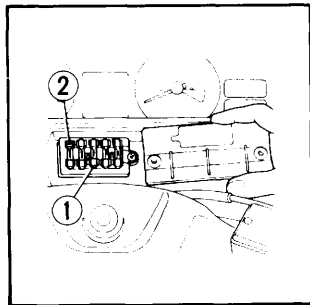

## Reemplazo de los fusibles

La caja de fusibles está situada entre el interruptor de encendido y el panel de instrumentos.

El fusible principal (3) está instalado al lado de la batería. Cuando se produzca quemadura frecuente de fusibles, esto indica una existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

**ATENCION:** No utilice nunca un fusible que tenga un otro régimen que lo especificado en la caja de fusibles, y tampoco utilice un otro material conductor en lugar de un fusible.

(1) Caja de fusibles

(2) Fusibles de repuesto

166 (3) Fusible principal

